

Trimmer

M372





005430

AWARNING:

For your personal safety, READ and UNDERSTAND before using. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ENGLISH SPECIFICATIONS

Model	M372					
Collet chuck capacity	6.35 mm (1/4") or 6.0 mm					
No load speed (min ⁻¹)	35,000					
Overall length	199 mm					
Net weight	1.6 kg					
Safety class	Class I					

Due to our continuing programme of research and development, the specifications herein are subject to change without notice.

END103-2

Note: Specifications may differ from country to country.

_

Symbols The following show the symbols used for the equipment. Be sure that you understand their meaning before use.

Ţ.

Read instruction manual.

Only for EU countries Do not dispose of electric equipment together with household waste material! In observance of European Directive 2002/96/EC on waste electric and electronic equipment and its implementation in accordance with national law, electric equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility. ENE010-1

Intended use

The tool is intended for flush trimming and profiling of wood, plastic and similar materials.

ENF001-1

Power supply

The tool should be connected only to a power supply of the same voltage as indicated on the nameplate, and can only be operated on single-phase AC supply. This tool should be grounded while in use to protect the operator from electric shock. Use only three-wire extension cords which have three-prong grounding-type plugs and three-pole receptacles which accept the tool's plug.

ENA100-1

GENERAL SAFETY RULES

WARNING! Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term "power tool" in all of the warnings listed below refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

SAVE THESE INSTRUCTIONS.

Work Area

- 1. **Keep work area clean and well lit.** Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- 3. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

- 4. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

Personal Safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- 10. Use safety equipment. Always wear eye protection. Safety equipment such as dust mask,

non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

- Avoid accidental starting. Ensure the switch is in the off-position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- 12. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- 15. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust-related hazards.

Power tool use and care

- 16. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- 17. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- 18. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- 19. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- 20. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- 22. Use the power tool, accessories and tool bits

etc. in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

SERVICE

 Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

ENB055-1

ADDITIONAL SAFETY RULES

- Hold tool by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.
- 2. Wear hearing protection during extended period of operation.
- 3. Handle the bits very carefully.
- 4. Check the bit carefully for cracks or damage before operation. Replace cracked or damaged bit immediately.
- 5. Avoid cutting nails. Inspect for and remove all nails from the workpiece before operation.
- 6. Hold the tool firmly.
- 7. Keep hands away from rotating parts.
- 8. Make sure the bit is not contacting the workpiece before the switch is turned on.
- Before using the tool on an actual workpiece, let it run for a while. Watch for vibration or wobbling that could indicate improperly installed bit.
- 10. Be careful of the bit rotating direction and the feed direction.
- 11. Do not leave the tool running. Operate the tool only when hand-held.
- 12. Always switch off and wait for the bit to come to a complete stop before removing the tool from workpiece.
- 13. Do not touch the bit immediately after operation; it may be extremely hot and could burn your skin.
- 14. Always lead the power supply cord away from the tool towards the rear.
- 15. Do not smear the tool base carelessly with thinner, gasoline, oil or the like. They may cause cracks in the tool base.
- 16. Draw attention to the need to use cutters of the

correct shank diameter and which are suitable for the speed of the tool.

- 17. PROPER GROUNDING. This tool should be grounding while in use to protect the operator from electric shock.
- EXTENSION CORDS. Use only three-wire extension cords which have three-prong grounding-type plugs and three-pole receptacles which accept the tool's plug. Replace or repair damaged or worn cord immediately.

SAVE THESE INSTRUCTIONS.

FUNCTIONAL DESCRIPTION

ACAUTION:

 Always be sure that the tool is switched off and unplugged before adjusting or checking function on the tool.

Adjusting bit protrusion



- 1. Base
- 2. Scale
- 3. Bit protrusion 4. Clamping screw

00543

To adjust the bit protrusion, loosen the clamping screw and move the tool base up or down as desired. After adjusting, tighten the clamping screw firmly to secure the tool base.

Switch action



ACAUTION:

 Before plugging in the tool, always be sure that the tool is switched off.

To start the tool, move the switch lever to the I position. To stop the tool, move the switch lever to the O position.

ASSEMBLY

ACAUTION:

 Always be sure that the tool is switched off and unplugged before carrying out any work on the tool.

Installing or removing trimmer bit



1. Loosen 2. Tighten 3. Hold

005433

ACAUTION:

- Do not tighten the collet nut without inserting a bit, or the collet cone will break.
- · Use only the wrenches provided with the tool.

Insert the bit all the way into the collet cone and tighten the collet nut securely with the two wrenches.

To remove the bit, follow the installation procedure in reverse.

OPERATION

Set the tool base on the workpiece to be cut without the bit making any contact. Then turn the tool on and wait until the bit attains full speed. Move the tool forward over the workpiece surface, keeping the tool base flush and advancing smoothly until the cutting is complete.

When doing edge cutting, the workpiece surface should be on the left side of the bit in the feed direction.



- 1. Workpiece
- 2. Bit revolving direction
- 3. View from the top of the tool
- 4. Feed direction

001984

NOTE:

 Moving the tool forward too fast may cause a poor quality of cut, or damage to the bit or motor. Moving the tool forward too slowly may burn and mar the cut. The proper feed rate will depend on the bit size, the kind of workpiece and depth of cut. Before beginning the cut on the actual workpiece, it is advisable to make a sample cut on a piece of scrap lumber. This will show exactly how the cut will look as well as enable you to check dimensions.



NOTE:

When using the trimmer shoe, the straight guide or the trimmer auide, be sure to keep it on the right side in the feed direction. This will help to keep it flush with the side of the workpiece.

ACAUTION:

Since excessive cutting may cause overload of the motor or difficulty in controlling the tool, the depth of cut should not be more than 3 mm at a pass when cutting grooves. When you wish to cut grooves more than 3 mm deep, make several passes with progressively deeper bit settings.

Templet auide



The templet guide provides a sleeve through which the bit passes, allowing use of the trimmer with templet patterns.

Remove the chip deflector.



1. Screwdriver

- 2. Base protector
- 3. Screws

Loosen the screws and remove the base protector. Place the templet guide on the base and replace the base protector. Then secure the base protector by tightening the screws.

Secure the templet to the workpiece. Place the tool on the templet and move the tool with the templet guide sliding along the side of the templet.



- 1. Bit 2 Base
- 3. Templet
- 4. Workpiece
- 5. Templet guide

NOTE:

The workpiece will be cut a slightly different size from the templet. Allow for the distance (X) between the router bit and the outside of the templet quide. The distance (X) can be calculated by using the following equation:

Distance (X) = (outside diameter of the templet guide router bit diameter) / 2

Straight guide (Accessory)



The straight guide is effectively used for straight cuts when chamfering or grooving.

Attach the guide plate to the straight guide with the bolt and the wing nut.



- 1. Bolt
- 2. Guide plate
- 3. Straight guide
- 4. Wing bolt

Circular work



- 1. Wina nut
- 2. Guide plate
- 3. Straight guide
- 4. Center hole
- 5 Bolt

001000

Remove the chip deflector.



004559

Attach the straight guide with the clamp screw (A). Loosen the wing nut on the straight guide and adjust the distance between the bit and the straight guide. At the desired distance, tighten the wing nut securely.

When cutting, move the tool with the straight guide flush with the side of the workpiece.

If the distance (A) between the side of the workpiece and the cutting position is too wide for the straight guide, or if the side of the workpiece is not straight, the straight quide cannot be used. In this case, firmly clamp a straight board to the workpiece and use it as a guide against the trimmer base. Feed the tool in the direction of the arrow.



005437

- 1. Clamp screw
- 2. Straight guide
- 3. Wing nut

between the center of circle and the center of bit) are as follows:

Min.: 70 mm

Max.: 221 mm

For cutting circles between 70 mm and 121 mm in radius.

Circular work may be accomplished if you assemble the

Min. and max. radius of circles to be cut (distance

straight guide and guide plate as shown in the figures.

For cutting circles between 121 mm and 221 mm in radius.



1. Wing nut

- 2. Guide plate
- 3. Straight guide
- 4. Center hole
- 5. Bolt

NOTE:

Circles between 172 mm and 186 mm in radius cannot be cut using this guide.

Align the center hole in the straight guide with the center of the circle to be cut. Drive a nail less than 6 mm in diameter into the center hole to secure the straight guide. Pivot the tool around the nail in clockwise direction.



- 1 Nail
- 2. Center hole
- 3. Straight guide

6

Trimmer guide



Trimming, curved cuts in veneers for furniture and the like can be done easily with the trimmer guide. The guide roller rides the curve and assures a fine cut.

Install the trimmer guide on the tool base with the clamp screw (A). Loosen the clamp screw (B) and adjust the distance between the bit and the trimmer guide by turning the adjusting screw (1 mm per turn). At the desired distance, tighten the clamp screw (B) to secure the trimmer guide in place.



1. Clamp screw (A) 2. Adjusting screw 3. Clamp screw (B)

4. Trimmer guide

When cutting, move the tool with the guide roller riding the side of the workpiece.



- 1. Workpiece
- 2. Bit
- 3 Guide roller

MAINTENANCE

Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.

Replacing carbon brushes



1 Limit mark

Remove and check the carbon brushes regularly. Replace when they wear down to the limit mark. Keep the carbon brushes clean and free to slip in the holders. Both carbon brushes should be replaced at the same time. Use only identical carbon brushes.

Use a screwdriver to remove the brush holder caps. Take out the worn carbon brushes, insert the new ones and secure the brush holder caps.



1. Brush holder cap 2. Screwdriver

To maintain product SAFETY and RELIABILITY, repairs. any other maintenance or adjustment should be performed by Makita Authorized Service Centers. always using Makita replacement parts.

ACCESSORIES

Router bits Straight bit



005116

				mm
	D	А	L1	L 2
20	6	20	FO	15
20E	1/4"	20	50	15
8	6	8	50	18
8E	1/4"	0	50	10
6	6	6	50	18
6E	1/4"	0	30	10

006485

"U"Grooving bit



005117

					mm
	D	A	L1	L2	R
6	6	6	60	28	3
6E	1/4"	0	, 00	20	5
000400					

"V"Grooving bit



005118

					mm
	D	A	L1	L 2	θ
20	6	20	50	15	۵۵°
20E	1/4"	20	50	15	50
006454					

Drill point flush trimming bit



005120

					mm
	D	A	L1	L2	L 3
6	6	6	60	10	20
6E	1/4"	0	00	10	20
006487					

Drill point double flush trimming bit



005121

						mm
	D	Α	L1	L 2	L 3	L 4
6	6	6	70	40	10	14
6E	1/4"	0	10	40	12	14
006488						

Corner rounding bit



005125

							mm
	D	A 1	A 2	L1	L2	L 3	н
8R	6	25	0	40	12	E	
8RE	1/4"	25	25 9	48	13	э	°
4R	6	20	8	45	10	4	4
4RE	1/4"	20	0	-5	10	+	-

006489

Chamfering bit



005126

						mm
	D	Α	L1	L 2	L 3	θ
30°	6	23	46	11	6	30°
30° E	1/4"	2.5	40		0	30
45°	6	20	50	40	-	450
45° E	1/4"		50	13	5	45
60°	6	20	40	14	2	e0°
60° E	1/4"	20	49	14	2	00
000400						

006462

Cove beading bit



005129

					mm
	D	А	L1	L2	R
4R	6	00	42		4
4RE	1/4"	20	43	8	4
8R	6	25	48	13	8
8RE	1/4"	25	40	15	0
006464					

Ball bearing flush trimming bit



005130

				mm	
	D	A	L1	L 2	
10	6	10	50	20	
10E	1/4"	10	50	20	
006465					

Ball bearing corner rounding bit



mm D A 1 Α2 L1 L 2 L 3 R 1 6 15 8 37 7 3.5 3 1/4" 1E 2 6 21 8 40 10 3.5 6 2E 1/4"

006466

Ball bearing chamfering bit



005132

r	r	1	ľ	γ	

	D	A 1	A 2	L 1	L 2	θ
45°	6	26	8	12	12	45°
45° E	1/4"	20	0	42	12	45
60°	6	20	8	41	11	60°
60° E	1/4"	20	0	41		00
000407						

006467

Ball bearing beading bit



								mm
	D	A 1	A 2	L1	L 2	L 3	R1	R2
2	6	20	8	40	10	4.5	2.5	4.5
2E	1/4"							
3	6	26	8	42	12	4.5	3	6
3E	1/4"	20						
000470								

								mm
	D	A 1	A 2	A 3	L1	L 2	L 3	R
2	6	20	12	8	40	10	5.5	4
2E	1/4"							
3	6	26	12	8	42	12	4.5	7
3E	1/4"	20						

Ball bearing cove beading bit



									mm
	D	A 1	A 2	A 3	A4	L 1	L 2	L 3	R
2	6	20	18	12	8	40	10	5.5	3
2E	1/4"								
3	6	26	22	12	8	42	12	5	5
3E	1/4"								

Ball bearing roman ogee bit



Makita Corporation