







VC4210L

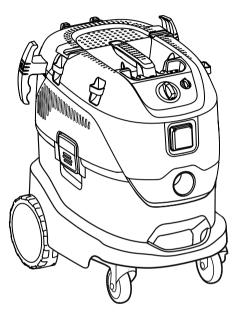

Originalbetriebsanleitung Original Operating Instructions Notice d'utilisation d'origine Oorspronkelijke Gebruiksaanwijzing Istruzioni originali Original driftsinstruks Bruksanvisning i original Original brugsanvisning Alkuperäiset ohjeet Manual original Instruções de operação original Πρωτότυπο οδηγιών χρήσης Orijinal talimatlar Izvirna navodila Izvorni upute Pôvodný návod na použitie Původní návod k používání Instrukcja oryginalna Eredeti használati utasítás Original instrucţiuni Оригинална инструкция Оригинальные инструкция Algupärane kasutusjuhend Instrukcijas oriģinālvalodā Originali instrukcija Udhëzimet origjinale Оригинално упатство за употреба Првобитна упутства Оригінальні інструкції

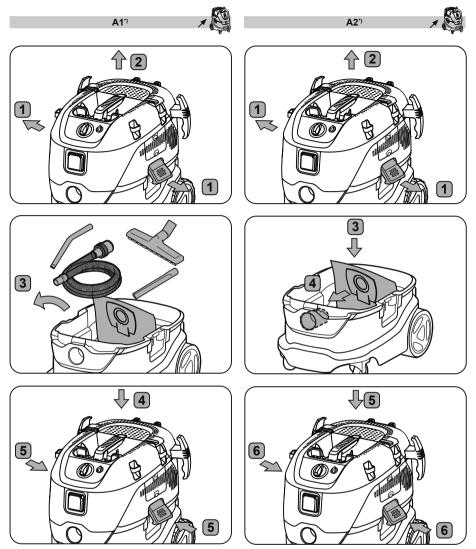


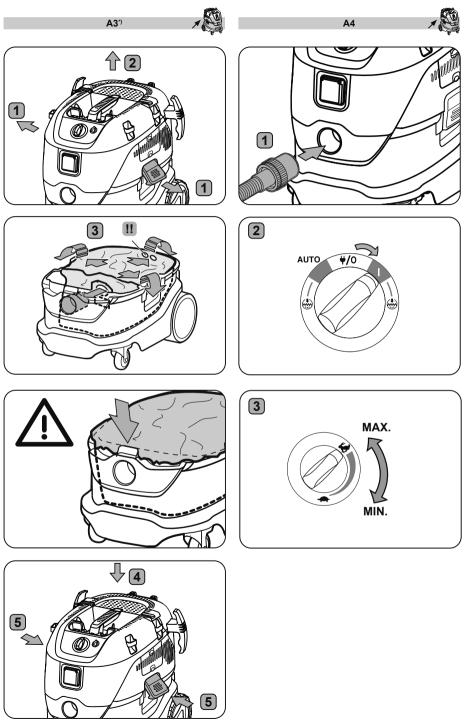


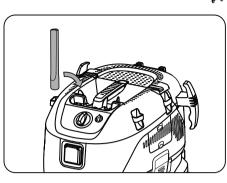



A5*)


× 2

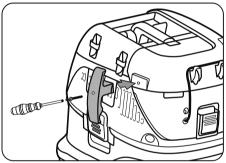


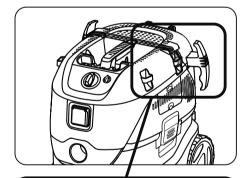

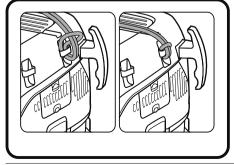


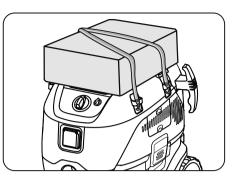


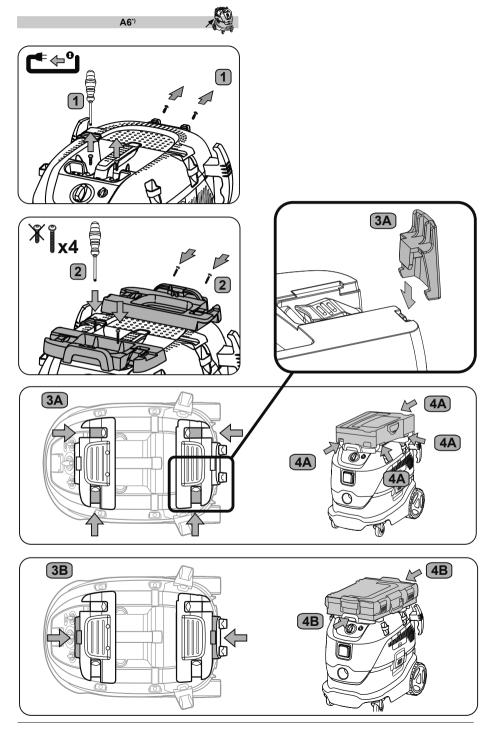

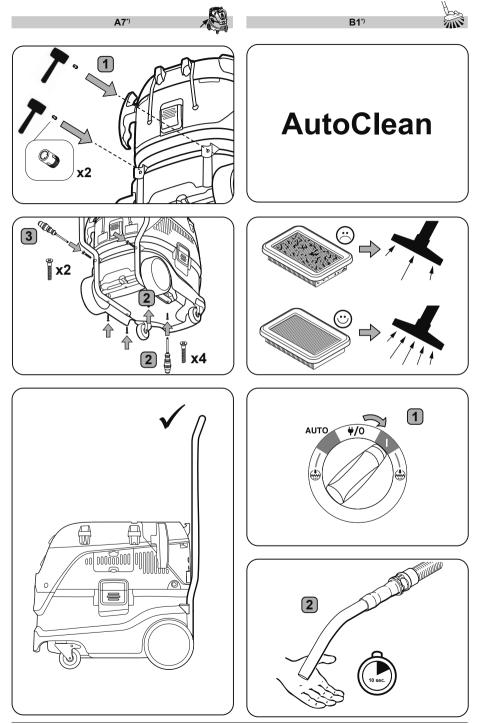




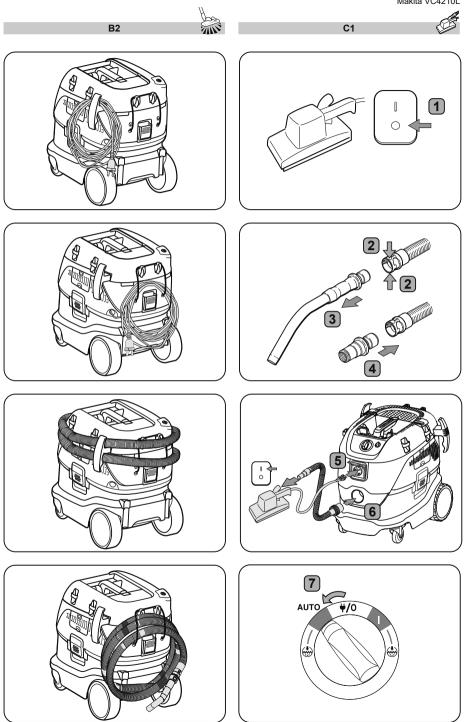

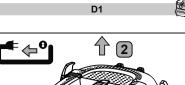


Ŕ

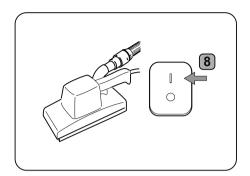


C1

C.S.


1

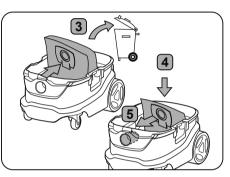


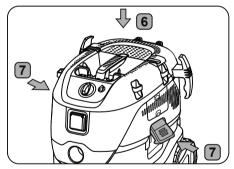




1 🐔

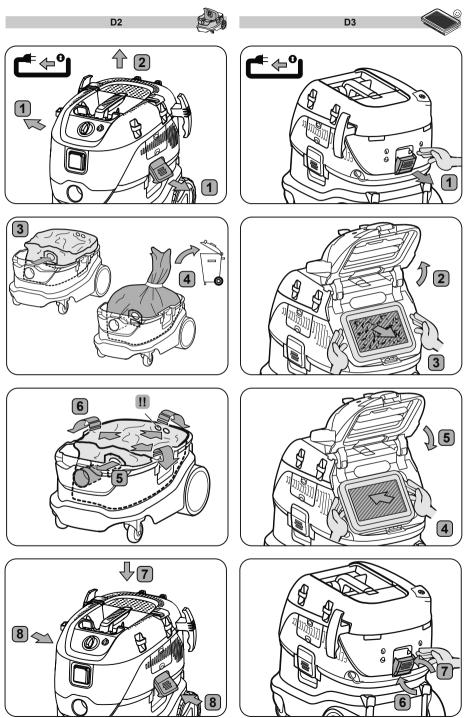

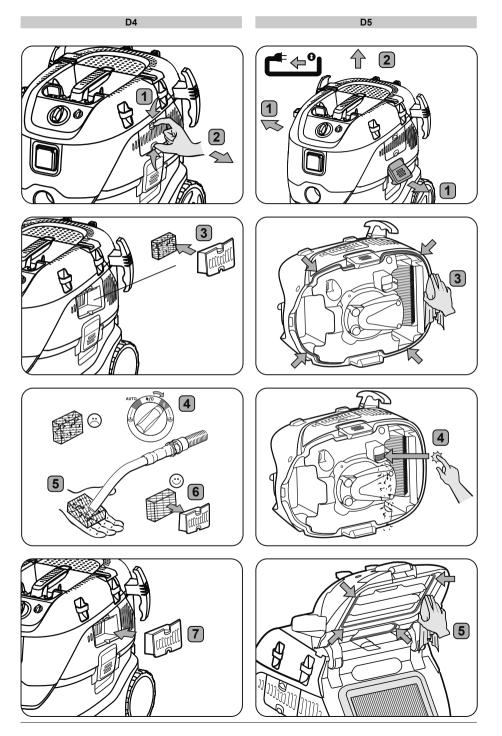

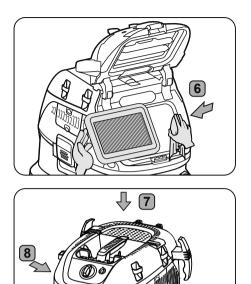


8



Function of the resettable circuit breaker

Applicable for models for the Australian market with a resettable circuit breaker

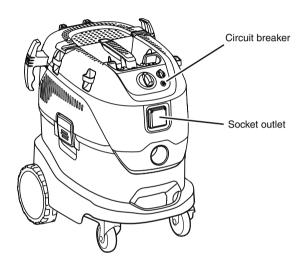


Only connect suitable power tools to the socket outlet on the vacuum cleaner. The power consumption of the power tool must not exceed 1,200 watts.

The socket outlet has a resettable circuit breaker. If the power consumption is too high, the circuit breaker interrupts the circuit. If the circuit breaker has tripped, it needs about 1 minute to cool down before it can be reset.

WARNING! Risk of injury from an automatically starting power tool. Before resetting the circuit breaker: Make sure that the connected power tool is switched off or disconnected from the socket outlet.

If the overload problem persists after resetting the circuit breaker several times: Seek professional help or contact Makita for technical advice.

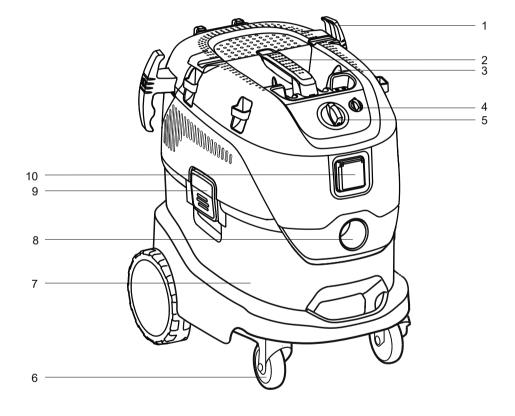

D

Quick reference guide

Operating elements

- 1 Hose hook
- 2 Handle
- 3 Accessory positions
- 4 Suction power control
- 5 Switch
- 6 Castor
- 7 Container
- 8 Inlet fitting
- 9 Latch
- 10 Appliance socket

The pictorial quick reference guide

The pictorial quick reference guide is designed for helping you when starting up, operating and storing the unit. The guide are subdivided into 4 sections, which are represented by symbols:

Α

в

С

D



Before starting

READ OPERATING INSTRUCTIONS BEFORE USE!

- A1 Unpack accessories
- A2 Filter bag installation
- A3 Disposal bag installation
- A4 Hose insert & operations
- A5 Accessories placement
- A6 Adaptor plate installation
- A7 Trolley handle installation



Control/Operation

- B1 AutoClean filter cleaning system
- B2 Cable and hose storage



Connecting electrical appliances

C1 - Power tool adaption

Maintenance

- D1 Filter bag replacement
- D2 Disposal bag replacement
- D3 Filter replacement
- D4 Motor cooling air diffuser cleaning
- D5 Gaskets and floater cleaning

Contents

1	Saf	ety instructions12
	1.1	Symbols used to mark instructions 12
	1.2	Instructions for use 12
	1.3	Purpose and intended use 12
	1.4	Electrical connection 12
	1.5	Extension lead13
	1.6	Guarantee
	1.7	Important warnings13
2	Ris	ks 14
	2.1	Electrical components 14
	2.2	Hazardous dust15
	2.3	Spare parts and accessories
	2.4	In explosive or inflammable atmosphere 15
3	Coi	ntrol / Operation15
	3.1	Starting and operating of the machine 15
	3.2	Auto-On/Off socket outlet for power tools 16
	3.3	AutoClean
	3.4	Antistatic connection*)
	3.5	Cooling air filter 16
	3.6	Wet pick-up 17
	3.7	Dry pick-up 17
1	Aft	er using the machine17
	4.1	After use 17
	4.2	Transport17
	4.3	Storage17
	4.4	Accessory and tool storage 17
	4.5	Recycling the machine 18
5	Mai	ntenance18
	5.1	Regular servicing and inspection
	5.2	Maintenance18
6	Fur	ther information18
	6.1	EC Declaration of conformity
	6.2	UK Declaration of conformity 19
	6.3	Specifications



Safety instructions

This document contains the safety information relevant for the appliance along with a quick reference guide. Before starting up your machine for the first time, this instruction manual must be read through carefully. Save the instructions for later use.

Attached to the US unit:

Vacuum Cleaner Safety Instructions US include important instructions to fire, electric shock or injury.

Further support

Further information on the appliance can be found on our web site at www.makita.com.

For further queries, please contact the Makita service representative responsible for your country.

1.1 Symbols used to mark instructions

DANGER

Danger that leads directly to serious or irreversible injuries, or even death.

WARNING

Danger that can lead to serious injuries or even death.

CAUTION

Danger that can lead to minor injuries and damage.

1.2 Instructions for use

The appliance must:

- only be used by persons, who have been instructed in its correct usage and explicitly commissioned with the task of operating it
- only be operated under supervision

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

Children shall be supervised to make sure that they do not play with the appliance.

Do not use any unsafe work techniques.

Never use the appliance without a filter.

Switch off the appliance and disconnect the mains plug in the following situations:

- Prior to cleaning and servicing
- Prior to replacing components
- Prior to changing over the appliance
- If foam develops or liquid emerges

Besides the operating instructions and the binding accident prevention regulations valid in the country of use, observe recognised regulations for safety and proper use.

Before starting work, the operating staff must be informed on and trained within:

- use of the machine
- risks associated with the material to be picked up
- safe disposal of the picked up material

1.3 Purpose and intended use

This mobile dust extractor is designed, developed and rigorously tested to function efficiently and safely when properly maintained and used in accordance with the following instructions.

This machine is suitable for industrial use, such as e.g. plants, construction sites and workshops.

This machine is also intended for commercial use, for example in hotels, schools, hospitals, factories, shops, offices and rental businesses.

Accidents due to misuse can only be prevented by those using the machine.

READ AND FOLLOW ALL SAFETY INSTRUC-TIONS.

The appliance is suitable for picking up dry, nonflammable dust and liquids.

Any other use is considered as improper use. The manufacturer accepts no liability for any damage resulting from such use. The risk for such use is borne solely by the user. Proper use also includes proper operation, servicing and repairs as specified by the manufacturer.

The appliance is suitable for picking up dry, nonflammable dust and liquids, hazardous dusts with OEL (Occupational Exposure Limit) value > 1mg/m³. Dust Class L (IEC 60335-2-69).



For machines intended for the Dust Class L, the filter material is tested. The maximum degree of permeability is 1% and there is no special requirement for disposal.

For dust extractors, ensure adequate air change rate, when the exhaust air is returned to the room. Observe national regulations before use.

1.4 Electrical connection

It is recommended that the machine should be connected via a residual current circuit breaker.

Arrange the electrical parts (sockets, plugs and couplings) and lay down the extension lead so that the protection class is maintained.

Connectors and couplings of power supply cords and extension leads must be watertight.

1.5 Extension lead

As an extension lead, only use the version specified by the manufacturer or one of a higher quality.

When using an extension lead, check the minimum cross-sections of the cable:

Cable lenth	Cross s	ection
	< 16 A	< 25 A
up to 20 m	1.5 mm ²	2.5 mm ²
20 to 50 m	2.5 mm ²	4.0 mm ²

1.6 Guarantee

Our general conditions of business are applicable with regard to the guarantee.

Unauthorised modifications to the appliance, the use of incorrect brushes in addition to using the appliance in a way other than for the intended purpose exempt the manufacturer from any liability for the resulting damage.

1.7 Important warnings

WARNING

 \bigwedge To reduce the risk of fire, electric shock, or injury, please read and follow all safety instructions and caution markings before use. This machine is designed to be safe when used for cleaning functions as specified. Should damage occur to electrical or mechanical parts, the machine and / or accessory should be repaired by a competent service center or the manufacturer before use in order to avoid further damage to the machine or physical injury to the user.

Do not leave the machine when it is plugged in. Unplug from the socket when not in use and before maintenance.

Outdoor use of the appliance shall be limited to occasional use.

Do not use with damaged cord or plug. To unplug grasp the plug, not the cord. Do not handle plug or machine with wet hands. Turn off all controls before unplugging.

Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run machine over cord. Keep cord away from heated surfaces.

Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts. Do not put any objects into openings or use with opening blocked. Keep openings free of dust, lint, hair, and anything else that could reduce the flow of air.

Do not use in outside areas at low temperature.

Do not use to pick up flammable or combustible liquids such

as gasoline, or use in areas where they may be present.

Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.

Use extra care when cleaning on stairs.

Do not use unless filters are fitted.

If the machine is not working properly or has been dropped, damaged, left outdoors, or dropped into water, return it to a service center or dealer.

If foam or liquid escapes from the machine, switch off immediately.

The machine may not be used as a water pump. The machine is intended for vacuuming air and water mixtures.

Connect the machine to a properly earthed mains supply. The socket outlet and the extension cable must have an operative protective conductor.

Provide for good ventilation at the working place.

Do not use the machine as a ladder or step ladder. The machine can tip over and become damaged. Danger of injury. Only use the socket outlet on the machine for purposes specified in the instructions.

2 Risks

2.1 Electrical components

DANGER

▲ The upper section of the machine contains live components.

Contact with live components leads to serious or even fatal injuries.

1. Never spray water on to the upper section of the machine.

DANGER

▲ Electric shock due to faulty mains connecting lead.

Touching a faulty mains connecting lead can result in serious or even fatal injuries.

- 1. Do not damage the mains power lead (e.g. by driving over it, pulling or crushing it).
- 2. Regularly check whether the power cord is damaged or shows signs of ageing.
- 3. If the electric cable is damaged, it must be replaced

by an authorized Makita distributor or similar qualified person in order to avoid a hazard.

 In no circumstances should the power supply cord be wrapped around fingers or any part of the operators person.

2.2 Hazardous dust

WARNING

Hazardous materials.

Vacuuming up hazardous materials can lead to serious or even fatal injuries.

- 1. The following materials must not be picked up by the machine:
 - hot materials (burning cigarettes, hot ash, etc.)
 - flammable, explosive, aggressive liquids (e.g. petrol, solvents, acids, alkalis, etc.)
 - flammable, explosive dust (e.g. magnesium or aluminium dust, etc.)

2.3 Spare parts and accessories

CAUTION

Spare parts and accessories.

The use of non-genuine spare parts, brushes and accessories can impair the safety and or function of the appliance. Only use original spare parts and accessories from Makita. Spare parts that can affect health and safety of the operator and or function of the appliance, are specified below:

Description	Order No.
Flat filter PTFE, 1 pcs.	W107418351
Fleece filter bag, 5 pcs.	W107418353
Disposal bag, 5 pcs.	W107418355
Motor cooling air filter PET, 1 pcs.	W107418352

2.4 In explosive or inflammable atmosphere

CAUTION

This machine is not suitable for use in explosive or inflammable atmospheres or where such atmospheres are likely to be produced by the presence of volatile liquid or inflammable gas or vapour.

3 Control / Operation

CAUTION

Damage due to unsuitable mains voltage.

The appliance can be damaged as a result of being connected to an unsuitable mains voltage.

1. Ensure that the voltage shown on the rating plate corresponds to the voltage of the local mains power supply.

3.1 Starting and operating of the machine

- Check that the electrical switch is switched off (in position 0).
- 2. Check that suitable filters are installed in the machine.
- Connect the suction hose into the suction inlet at the machine by pushing the hose forward until it fits firmly in place at the inlet.
- Connect the tubes with the hose handle, twist the tubes in order to ensure that they are properly fitted.
- Attach suitable nozzle to the tube. Choose nozzle depending on what type of material that is to be picked-up.
- If used for dust extraction in connection with dust producing tool then connect end of suction hose with appropriate adapter.
- 7. Connect the plug into a proper electrical outlet.
- 8. Put the electrical switch into position I in order to start the motor.

AUTO V/O	Turn I: Activate the machine
	Turn #/0: Stop the machine. Permanent power on socket
	Turn AUTO : Activate Auto-On/Off operation
	Turn I + 💮 : Activate the machine with deactivated automatic filter cleaning function
	Turn AUTO + 💮 : Activate Auto- On/Off operation with deactivated automatic filter cleaning function
	Suction power control operation on separate turning knob

3.2 Auto-On/Off socket outlet for power tools

CAUTION

Appliance socket.

The appliance socket is designed for electrical auxiliary equipment; see technical data for reference.

- Prior to plugging in an appliance, always switch off the machine and the appliance that is to be connected.
- 2. Read the operating instructions to the appliance to be connected and observe the safety notes contained in these.

An appliance socket with earthing contact is integrated in the machine. An external power tool can be connected there. The socket features permanent power on, when the electrical switch is in position ψ/o , i.e. the machine can be used as an extension cord.

In position AUTO the machine can be switched on and off by the power tool connected. Dirt is picked up from the source of dust immediately. To comply with regulations, only approved dust producing tools should be connected.

The maximum power consumption of the connected electrical appliance is stated in section "Specifications".

Before turning the switch to position AUTO ensure that the tool connected to the appliance socket is switched off.

3.3 AutoClean

The machine is equipped with an automatic filter cleaning system, AutoClean. A frequent cleaning cy-

cle will automatically run during operation to ensure that suction performance is always at its best.

If suction performance decreases or in extensive dust applications a manually filter cleaning operation is recommended:

- 1. Switch off the machine.
- 2. Close the nozzles or suction hose opening with the palm of your hand.
- Turn the switch to position "I" and let the machine operate at full speed for approx. 10 seconds with the suction hose opening closed.

If suction power is still reduced take out the filter and clean mechanically or replace filter.

For certain applications, like wet pick up, it is recommended to turn off the automatic filter cleaning system. For details see chapter 3.1.

3.4 Antistatic connection*)

CAUTION

The machine is equipped with an antistatic system to discharge any static electricity that may develop during dust pick-up.

The antistatic system is placed in front part of the motor top and creates an earth ground connection to the inlet fitting of the container.

For proper function the use of an electrical conductive or antistatic suction hose is recommended.

1. When inserting the optional disposal bag make sure the antistatic connection is kept.

3.5 Cooling air filter

To protect the electronics and motor, the machine is equipped with a cooling air diffusor. Clean the cooling air diffusor regularly.

For areas with a high concentration of fine dust in the surrounding air it is recommended to equip the machine with an optional cooling air filter cartridge to prevent dust from settling inside the air channels and motor. Contact your local sales representative.

CAUTION

If cooling air filter is clogged by dust the overload protection switch in the motor can be activated.

 In such case switch off the machine, clean cooling air filter and allow machine to cool for approx. 5 minutes.

3.6 Wet pick-up

CAUTION

The machine is equipped with a water level limit system which shuts off the machine when the maximum liquid level is reached.

- 1. When this occurs, switch off the machine.
- 2. Disconnect the machine from the socket and empty the container.
- Never pick up liquids without the water level limit system and filter in place.
- 4. Do not pick up flammable liquids.
- Before liquids are picked up, always remove the filter bag/wastebag and check that the water level limit works properly.
- 6. If foam appears, stop work immediately and emty the tank.
- 7. Clean the water level limiting device regularly and check for signs of damage.

Before emptying the container, unplug the machine. Disconnect the hose from the inlet by pulling out the hose. Release the latches by pulling them outwards so that the motor top is released. Lift up the motor top from container. Always empty and clean the container and water level limit system after picking-up liquids.

Empty by tilting the container backwards or sideways and pour the liquids into a floor drain or similar.

Put back the motor top to the container. Secure the motor top with the latches.

Heavy maneuvers can, by mistake, trigger the water level limiting device. Should this happen; turn off the machine and wait for 3 seconds to reset the device. Continue to operate the machine afterwards.

3.7 Dry pick-up

CAUTION

Picking up environmentally hazardous materials.

Materials picked up can present a hazard to the environment.

1. Dispose of the dirt in accordance with legal regulations.

Remove the electrical plug from the socket before emptying after dry pick-up. Release the latches by pulling them outwards so that the motor top is released. Lift up the motor top from container.

Filter: Check the filters. To clean the filter you can shake, brush or wash it. Wait until the filter is dry before re-starting dust pick-up.

Dust bag: check bag to ensure the fill factor. Replace dust bag if necessary. Remove the old bag.

The new bag is fitted by passing the cardboard piece with the rubber membrane through the vacuum inlet. Make sure that the rubber membrane is passing past the heightening at the vacuum inlet.

After emptying: close motor top to the container and secure the motor top with the latches. Never pick up dry material without filter fitted in the machine. The suction efficiency of the machine depends on the size and quality of the filter and dust bag. Therefore – use only Original filter and dust bags.

4 After using the machine

4.1 After use

Remove the plug from the socket when machine is not in use. Wind up the cord starting from the machine. The power cord can be wound up around the motor top or at the container or placed in the included hook, or fastening means. Some variants have special storage places for accessories.

4.2 Transport

- 1. Before transporting the machine, close all the latches.
- 2. Do not tilt the machine if there are liquids in the dirt tank.
- 3. Do not use a crane hook to lift the machine.
- 4. Do not lift the machine by the trolley handle') or the handle of the MAKPAC-Box').

4.3 Storage

Store the appliance in a dry place, protected from rain and frost. The machine shall be stored indoors only. Wet filters and the interior part of the liquid container shall be dried before storage.

4.4 Accessory and tool storage

For convenient transport and storage of accessories or tools, integrated rails are found on side of machine which allows fastening with straps or other means. A flexible strap and hooks are included on back of machine for attachment of suction hose or mains cable. For instruction see quick reference guide.

An optional adapter plate^{°)} with attachment system can be installed on top of machine for fastening of 2-point or 4-point storage cases.

Remove the electrical plug from the socket before installing the adapter plate.

CAUTION*)

Do not lift machine in adapter plate without having storage case safely installed. Note the

weight and balance of the appliance in case of storage. Maximum weight of storage cases is 30 kg.

4.5 Recycling the machine

Make the old machine unusable.

- 1. Unplug the machine.
- 2. Cut the power cord.
- 3. Do not discard of electrical appliances with household waste.

As specified in European Directive 2012/19/EU on old electrical and electronic appliances. used electrical goods must be collected sepa-

rately and recycled ecologically.

Maintenance 5

5.1 Regular servicing and inspection

Regular servicing and inspection of your machine must be carried out by suitably gualified personnel in accordance with relevant legislation and regulations. In particular, electrical tests for earth continuity, insulation resistance, and condition of the flexible cord should be checked frequently.

In the event of any defect, the machine MUST be withdrawn from service, completely checked and repaired by an authorized service technician.

At least once a year, a Makita technician or an instructed person must perform a technical inspection including filters, air tightness and control mechanisms

5.2 Maintenance

Remove the plug from the socket before performing maintenance. Before using the machine make sure that the frequency and voltage shown on the rating plate correspond with the mains voltage.

The machine is designed for continuous heavy work. Depending on the number of running hours - the dust filter should be renewed. Keep the machine clean with a dry cloth, and a small amount of spray polish.

During maintenance and cleaning, handle the machine in such a manner that there is no danger for maintenance staff or other persons.

In the maintenance area:

- Use filtered compulsory ventilation •
- Wear protective clothing
- Clean the maintenance area so that no harmful substances get into the surroundings

During maintenance and repair work all contaminated parts that could not be cleaned satisfactorily must be:

• Packed in well sealed bags

Disposed of in a manner that complies with valid regulations for such waste removal.

For details of after sales service contact your dealer or Makita service representative responsible for your country. See reverse of this document.

Further information 6

6.1 EC Declaration of conformity

For European countries only:

We hereby declare that the machine described below complies with the relevant basic safety and health requirements of the EU Directives, both in its basic design and construction as well as in the version put into circulation by us. This declaration shall cease to be valid if the machine is modified without our prior approval.

Product: Wet and dry vacuum cleaner Type: VC4210L

Relevant EU Directives: 2006/42/EC, 2014/30/EU, 2011/65/EU

Applied harmonized standards: EN 60335-1:2012+A11:2014+A13:2017 EN 60335-2-69:2012 EN 55014-1:2017 EN 55014-2:2015 EN IEC 61000-3-2:2019 EN 61000-3-3:2013+A1:2019 EN IEC 63000:2018

Authorised Documentation Representative: Makita Europe N.V., Jan-Baptist Vinkstraat 2, 3070 Kortenberg, Belgium

. Tayuna a

01.07.2020 Hiroshi Tsuiimura Director - Makita Europe N.V. Makita Europe N.V., Jan-Baptist Vinkstraat 2, 3070 Kortenberg, Belgium

6.2 UK Declaration of conformity

For UK only:

We hereby declare that the machine described below complies with the relevant basic safety and health requirements of the UK Regulations, both in its basic design and construction as well as in the version put into circulation by us. This declaration shall cease to be valid if the machine is modified without our prior approval.

Product: Wet and dry vacuum cleaner Type: VC4210L

Relevant UK Regulations: S.I. 2008/1597 (as amended), S.I. 2016/1091 (as amended), S.I. 2012/3032 (as amended)

Applied Designated standards: EN 60335-1:2012+A11:2014+A13:2017 EN 60335-2-69:2012 EN 55014-1:2017 EN 55014-2:2015 EN IEC 61000-3-2:2019 EN 61000-3-3:2013+A1:2019 EN IEC 63000:2018

Authorised Documentation Representative: Makita Europe N.V., Jan-Baptist Vinkstraat 2, 3070 Kortenberg, Belgium

Toumun a

01.07.2020 Hiroshi Tsujimura Director - Makita Europe N.V. Makita Europe N.V., Jan-Baptist Vinkstraat 2, 3070 Kortenberg, Belgium

Importer: Makita (UK) Limited, Michigan Drive, Tongwell, Milton Keynes, Buckinghamshire, MK15 8JD, UK

D GB F NL Ν DK SF Ε Ρ GR ΤR SL0 HR CZ ΡL Н RO BG RUS EST V LT MK SR UΚ

GΒ I N S SF sк cz Н RO LV LT AL MK SR UK

6.3 Specifications

Image EU FRY RU AU NS CH Mains Volage V 220-240 220-240 20 Mains Foquency Hz 220-240 200 200 Mains Foquency Hz 5660 2000 2000 Mains Foquency W 2400 1100 1100 Mains Foquency W 2600 2300 2600 Polic oncerted load W 3600 2300 2600 Polic oncerted load W 3600 2300 2600 Felse Nin/Individ A 160 100 Volume fow (ai) max. ¹ Nin/Individ A 66.42 260 Volume fow (ai) max. ¹ Nin/Individ A 66.42 260 Volume fow (ai) max. ¹ Nin/Individ A 66.42 260 Volume fow (ai) max. ¹ Nin/Individ A 66.42 260 Volume fow (ai) max. ¹ Min/Individ Nin/Individ 260 26.111 Volume fow (ai) max. ¹ <td< th=""><th></th><th></th><th></th><th>Makit</th><th>Makita VC4210L</th><th></th><th></th><th></th></td<>				Makit	Makita VC4210L			
otigge V 220-240 220-240 requency. Hz 200-240 5060 100 requency. W 2400 1100 1100 1100 consumption W 2400 75060 2300 2300 reductor appliance socket W 3600 2300 2300 2300 reductor appliance socket W Na 3600 2300 2300 reductor application W Na 36010 3612 3612 notation Molecular Ma Molecular S612.46 S612.46 reductor Molecular Molecular Molecular S616.27 S616.27 m Molecular Molecular Molecular S616.21				EU / FR / RU	AU / NZ	СН	GB	CA / US / MX
induction Hz E0060 inductor w 2400 1100 1200 consumption w 3600 2300 1 consumption w 3600 2300 1 consumption model for appliance socket w 3600 2300 1 consumption fm mbsr / hg / hg mbsr / hg 1 1 1 ond end for appliance socket be/ hg mbsr / hg / hg 2300 2300 2300 10 ond watch be/ hg mbsr / hg / hg model 2300 2300 2300 230 250 / 10 fm mbsr / hg / hg mbsr / hg / hg model 2300 2300 230 2	lains Voltage		>	220-240	220-240	22	220-240	110-120
onsumption w 1200 centurption w 2400 1100 1 centurption w 3600 2300 100 1 onnected load w 3600 2300 200 10 1 onnected load winin/m?h/dm m 16 100 10 10 10 1 off w(alt)max. ¹ Winin/m?h/dm m 16 2300 2300 2300 10	lains frequency		Hz		50	(60		50/60
clied load for appliance socket W 2400 1100 1 omecked load W 3600 2300 1 omecked load Mmi/m/h/dm T 2300/27016 1 n Mmi/m/h/dm Mmi/m/h/dm 200/27016 1 n Mmi/m/h/dm Mmi/m/h/dm 1 2 n Mmi/m/h/dm Mmi/m/h/dm 1 1 n Mmi/m/h/dm Mmi/m/h/dm 1 1 n Mmi/m/h/dm Mmi/m/h/dm 1 1 n Mmi/m/h/dm Mmi/m/h/dm 1	ower consumption		N		12	00		890 / 7.4 A
meted lod w 3600 2300 I h h h h h h h h	onnected load for applianc	e socket	×	2400	1100	1100	1700	550 / 4.6 A
Fibre Fibre <t< td=""><td>otal connected load</td><td></td><td>×</td><td>3600</td><td>2300</td><td>2300</td><td>2900</td><td>1440 / 12 A</td></t<>	otal connected load		×	3600	2300	2300	2900	1440 / 12 A
Flow (air) max. ³ Imin / rim 4500 / 270 / 16 n mbar / hPa / H ₂ O Lift mbar / hPa / H ₂ O Lift 250 / 250 / 10 pressure level (EC 6035-2-69) dB(A) dB(A) dB(A) 250 / 250 / 10 pressure level (EC 6035-2-69) dB(A) mbar / hPa / H ₂ O Lift 250 / 250 / 10 involution mbar / hPa / H ₂ O Lift mbr / hPa / H ₂ O Lift 250 / 250 / 10 involution mbar / hPa / H ₂ O Lift mbr / hPa / H ₂ O Lift 250 / 250 / 10 involution mbr / h mhr / h HOTRN-F 3G / 10 260 / 270 / 15 involution mhr / h mhr / h HOTRN-F 3G / 10 10 involution mhr / h HOTRN-F 3G / 10 HOTRN-F 3G / 10 10 involution mhr / h HOTRN-F 3G / 10 HOTRN-F 3G / 10 10 involution mhr / h HOTRN-F 3G / 10 HOTRN-F 3G / 10 10 involution mhr / h HOTRN-F 3G / 10 HOTRN-F 3G / 10 10 involution mhr / h HOTRN-F 3G / 10 HOTRN-F 3G / 10 10 int	use		A	16	-	0	13	15
n mar /h Par / H_0 Lift 250 / 250 / 100 presure level (EC 6035-2-69) dB(A) aB(A) 250 / 250 / 100 level dB(A) dB(A) aB(A) 250 / 250 / 100 nr w bration m/s dB(A) aB(A) aB(A) nr w bration m/s h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 out leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 out leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 out leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 lout leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 lout leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 lout leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 lout leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 lout leget m / ft h07RN-F 3G1.5 mm ⁴ h05RN-F 3G1.00 lout leget m / ft m / ft h05RN-F 3G1.00 lout leget m / ft m / ft lout leget	olume flow (air) max.*)		l/min / m³/h / cfm		4500 / 2	70 / 158		4200 / 252 / 148
$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$	acuum		mbar / hPa / H ₂ O Lift		250 / 25	0 / 100"		230 / 230 / 92"
	ound pressure level (IEC 6	0335-2-69)	dB(A)			68 ±2		
$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$	ound level		dB(A)			60 ±2		
$ \begin{array}{ $	and-arm vibration		m/s²			<2.5		
	ower cord length		m / ft			7.5 / 24.6		
ion class ion class ion class Protection rent rent Interference suppression level interference interference ass interference interference interference ass interference interference interference ass interference interference interference ass interference interference interference olume interference interference interference olume interference interference interference olume interference interference interference interference olume interference interference interference interference olume <t< td=""><td>ower cord type</td><td></td><td></td><td>H07RN-F 3G1.5 mm²</td><td>H05RN-F 3</td><td>G1.00 mm²</td><td>H07RN-F 3G1.5 mm²</td><td>SJTW-A 3AWG14</td></t<>	ower cord type			H07RN-F 3G1.5 mm ²	H05RN-F 3	G1.00 mm ²	H07RN-F 3G1.5 mm ²	SJTW-A 3AWG14
Iprotection Implementation Implementa	rotection class					_		
Iterference suppression level Iterference ass L ass L ass L eaning L eaning L max. L lume L dust L value L value L mm (in) L mm (in) L mm (in) L fuel, most common application) kg (b) lume, most common application) Kg (b)	/pe of protection					IPX4		
ass earling- teaning- laune duat burne duat duat burne duat duat duat duat duat duat duat duat	adio interference suppress	sion level				EN 55014-1		
earling max LIUKgal /USgal) lume max 1 (UKgal /USgal) dust 1 (UKgal /USgal) max water 1 (UKgal /USgal) max mater 1 (UKgal /USgal) max mater 1 (UKgal /USgal) max mater 1 (UKgal /USgal) max mm (in) mm (in) mm (in) freet, most common application) kg (lb) max als CE / CE / EAC RCM	ust class				-			HEPA
max I (UKgal /USgal) dust I (UKgal /USgal) water I (UKgal /USgal) water I (UKgal /USgal) mater I (UKgal /USgal) mm (in) mm (in) mm (in) mm (in) fmt (in) mm (in)	ilter cleaning					Automatic		
dust l (UKgal /USgal) water I (UKgal /USgal) mater I (UKgal /USgal) mm (in) mm (in) fmet, most common application) kg (b) als CE / CE / EAC RCM	ma	×	I (UKgal /USgal)			42 (9,2 / 11,1)		
water I (UKgal /USgal) mm (in) mm (in) inth (in) mm (in) mm (in) mm (in) fmet, most common application) kg (b) als CE / CE / EAC RCM		st	I (UKgal /USgal)			34 (7,5 / 9,0)		
mm (in) mm (in) mm (in) mm (in) (net, most common application) kg (lb) als CE / CE / EAC RCM	wai	ter	I (UKgal /USgal)			30 (6,6 / 8,9)		
mm (in) mm (in) mm (in) mm (in) (net, most common application) kg (lb) als CE / CE / EAC	lidth		mm (in)			385 (15.2)		
mm (in) mm (in) (net, most common application) kg (lb) als CE / CE / EAC	epth		mm (in)			575 (22.6)		
t, most common application) kg (lb) CE / CE / EAC RCM	eight		mm (in)			605 (23.8)		
CE/CE/EAC RCM	/eight (net, most common ¿	application)	kg (lb)			16.0 (35.3)		
	pprovals			CE / CE / EAC	RCM	CE	CE	ANSI Approval / CSAus1017
* measured at turbine Severifications and details are subject to chance without orior notice.	neasured at turbine ecifications and details are	subject to change w	vithout prior notice.					

*) Optional accessories / Option depending on model Original instruction

Makita VC4210L